


# FLIP - STATION

FLIP - STATION


The Tresky **DIE FLIP - STATION** is designed to minimize the mechanical stress on the Chip to avoid any damage. The soft flipping of the die upside down is gently controlled and can be activated manually or automatically. An exchangeable tip and support plate allows to handle a wide range of die sizes (down to 0.250mm). The adjustable speed and height gives you the most possible flexibility to flip a die.

MICRO ASSEMBLY


Place component onto the flipper pedestal

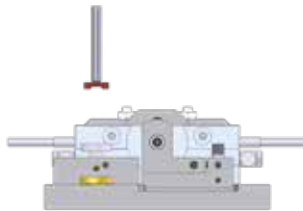


Flipper arm moves automatically towards pedestal

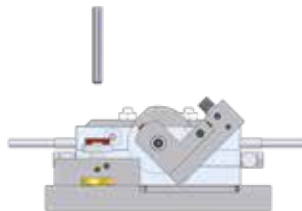


Automatic pick-up of the component

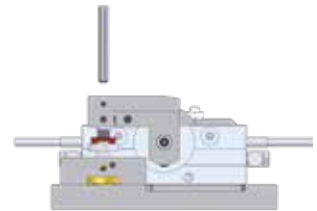

Picked component flips automatically

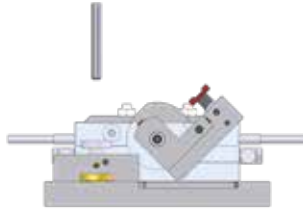


Pick flipped component from flip station

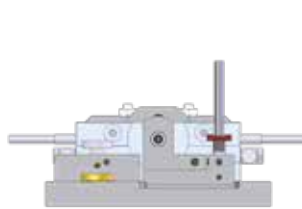

All **T-5000 SERIES** models can be upgraded with the die flip-station.

OPTION

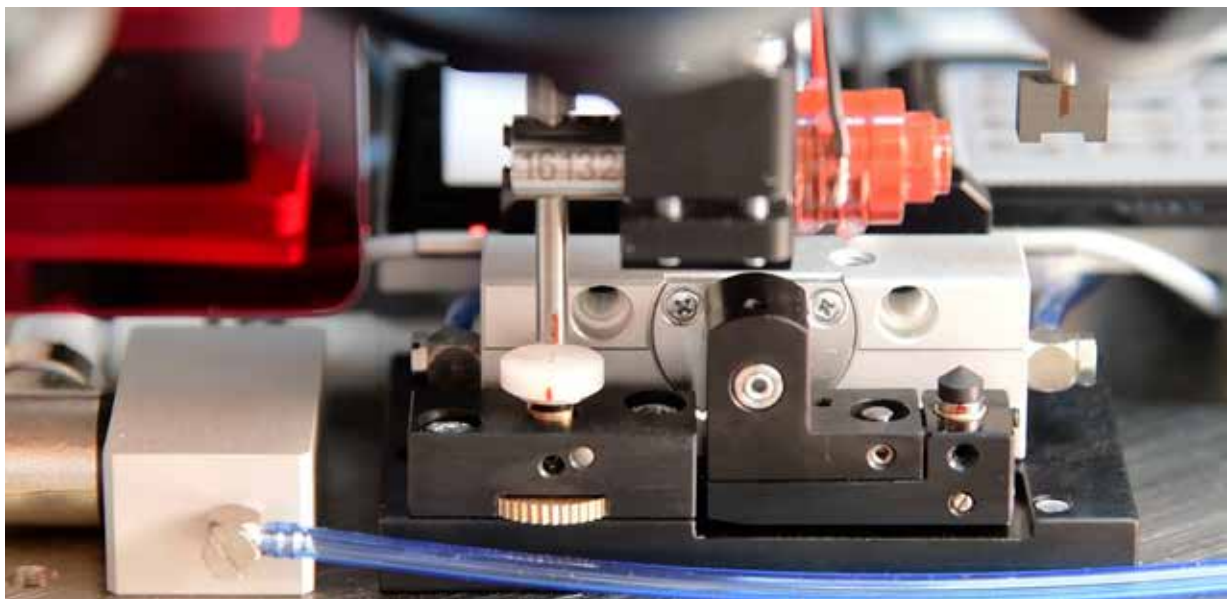

# TRESKY

Dr. TRESKY AG  
Switzerland  
tresky@tresky.com  
www.tresky.com